 




*Let's get started!*



#### What's in the box:

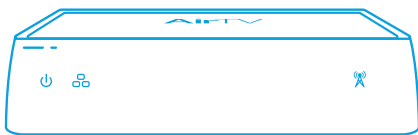 


AirTV



Power cable

#### What you'll need:

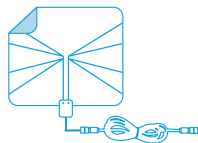

#### Over-the-air (OTA) antenna and coaxial cable

Visit [AirTV.net/OTA](http://AirTV.net/OTA) for more information. Channel availability is subject to local geography and antenna placement.



#### Android or iOS mobile device (phone or tablet) for setup



 
#### Broadband Internet access with WiFi for streaming



#### External hard drive for recording local channels

## Before you start...

Place your HD antenna in the best location for receiving the most and strongest local signals. You don't need to permanently mount your antenna just yet, as you may need to adjust it later for optimal performance.

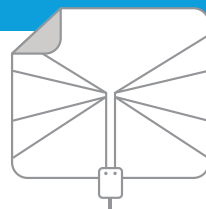

You can get the best reception from your antenna by following these tips:


- ✓ Try a window first
- ✓ Higher is better
- ✓ Point it toward your broadcast towers


For more tips and information on the ideal placement for your type of OTA antenna, visit [AirTV.net/OTA](http://AirTV.net/OTA).

## A. Connect your AirTV

 - 1 Connect to OTA**  
Connect AirTV to your OTA antenna using a coaxial cable.

- 2 Connect to Internet**  
Connect your own Ethernet cable from your router or modem, or connect to your WiFi network during on-screen setup.

- 3 Connect to power**  
Connect the power cable and the Power light  on the front of the unit will blink. Other lights may blink as well, which is normal.

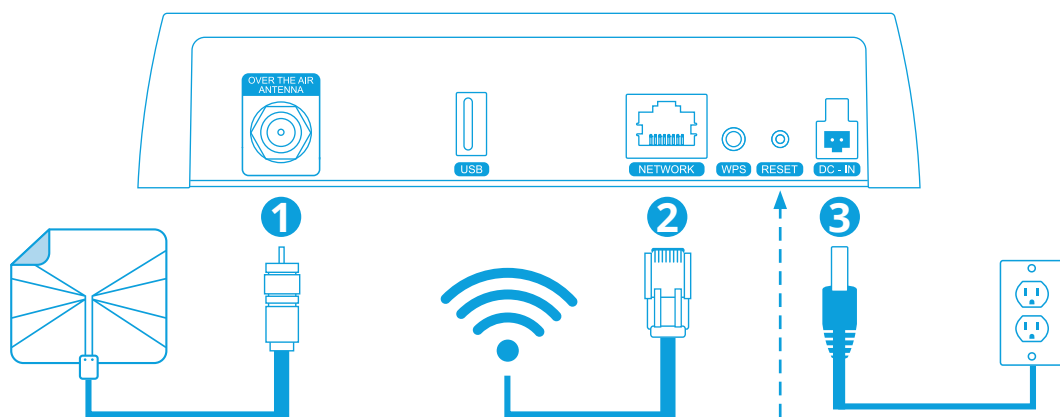

### Need to start over?

If you need to restart the installation process while configuring your AirTV, push the end of a paper clip into the **RESET** port for 12 seconds (until the front panel lights blink twice) to factory-reset the unit.

## B. Configure your AirTV



Complete setup using the **Sling TV** app, which integrates all of your live TV channels, including Sling TV and your HD local channels.

- 1 On your mobile device, connect to your home WiFi network that AirTV will connect to.
- 2 Open the Sling TV app and sign in. If you don't have the app, download and install it from your app store, then create your free Sling TV account to sign in.
- 3 In the Sling TV app, access **Settings » Over-the-Air Channels**.
- 4 Follow the on-screen instructions to connect to your home WiFi network and scan for channels.

**Note:** AirTV supports up to 2 simultaneous streams, only 1 of which can be outside the home where AirTV is located.



*If you don't see some of your available local channels after the channel scan completes, make sure that your antenna is placed in the best location, then rescan for channels. You can find tips for improving your signal at [AirTV.net/OTA](http://AirTV.net/OTA).*

 
- 5 Once your setup is complete, you can access your local channels on your iOS, Android and Roku devices via the Sling TV app. Visit [AirTV.net](http://AirTV.net) to see a complete list of AirTV devices as they're added.

If you want to use AirTV without enjoying all the features of Sling TV, a standalone AirTV app is available. Visit [AirTV.net](http://AirTV.net) for more information.

## C. Using the DVR feature

Connect hard drive to the AirTV USB port and follow the on-screen prompts.

Start recording your local channels. If you need help visit [AirTV.net/Help](http://AirTV.net/Help).

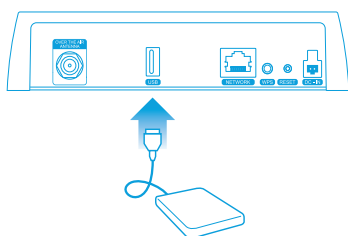

## Need help?

We're here for you.

For more information, including frequently asked questions, how-to instructions and troubleshooting tips, please visit [AirTV.net/Help](http://AirTV.net/Help).



Twitter  
[@AirTV](https://twitter.com/AirTV)



Facebook  
[myAirTV](https://www.facebook.com/myAirTV)



Cut the cord. Watch local TV anywhere.

## AirTV.net

### Federal Communications Commission Notices

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by following one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this device may void your authority to operate this equipment.

Device must be installed at least 20cm (~8 inches) from typical person locations per FCC RF Exposure guidelines.

Operation in the band 5150–5250 MHz is only for indoor use.

© 2018 AirTV, L.L.C. All rights reserved. Other products and companies mentioned are the trademarks of their respective owners and not of AirTV L.L.C.

Warranty, safety, regulatory, and legal information can be found at [AirTV.net/Legal](http://AirTV.net/Legal).

217454